
# Remco Lobby Dustpan Assembly

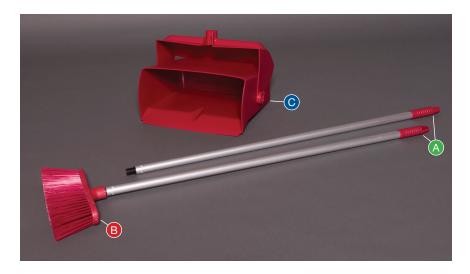

The Remco Lobby Dustpan comes in four separate pieces that require assembly. Each dustpan set comes with (2) A aluminum handles, (1) B broom head, and (1) Olobby dustpan. Contact your distributor for replacement parts.

## **Dustpan Assembly:**

Close the dustpan lid. Place the threaded end of the dustpan handle into the threaded opening on the lid. Twist the handle clockwise until it both meets resistance and the hanging hole of the handle faces forward.

## **Broom Assembly:**

Place the threaded end of the broom handle into the broom head opening. Twist the handle clockwise until it both meets resistance and the hanging hole of the handle faces forward.

# **Dustpan and Broom Assembly:**

Open the dustpan lid. Place broom head at bottom of dustpan. Press the handle of the broom into the cradle on the lid until the handle snaps in place. The dustpan lid may now be closed and the broom can be stored inside the dustpan.

# Remco Lobby Dustpan Features

### **Locking Mechanism:**

The Remco Lobby Dustpan features a hub lock that prevents the dustpan from closing when engaged. This allows for easier collection during sweeping as well as emptying of the dustpan itself

**To Lock:** Open dustpan so that the flat side is flat on the floor and pull the handle back until you hear a "pop." Expect a fair amount of resistance when attempting to engage the lock the first few times.

**To Unlock:** Lean the handle forward until you hear a "pop." The dustpan will then swivel to close.



Dustpan lid in unlocked position



Dustpan lid in locked position

#### Removable Lid:

The swivel lid may be removed from the dustpan to allow for easier cleaning of the dustpan parts.

**To Disassemble:** Slide your fingers between the lid and the pan and pull with force. When the lid pops off the swivel hinge, repeat on the opposite side.

**To Reassemble:** Line up the lid hole with the dustpan hinge and press firmly until the lid pops in place. Repeat for opposite side.



Note: Grooves are present on both sides of the lid to assist lid removal



