



## **MAGTRAP - Model 135**

### **INSTALLATION AND OPERATING INSTRUCTIONS**

**RARE EARTH MAGNETS ARE DANGEROUS DO NOT  
UNWRAP THIS CESCO MAGTRAP WITHOUT FIRST READING  
AND FULLY UNDERSTANDING THESE INSTRUCTIONS. YOUR  
SAFETY AND THE SAFETY OF OTHERS DEPEND UPON IT !**

Write the MAGTRAP's line size and its serial number (stamped into unit) in the blank spaces below. This data will be useful when ordering parts and when requesting assistance.

**Model Number: 135 Line Size:** \_\_\_\_\_

**Serial Number:** \_\_\_\_\_

The information below is for your benefit and should also be completed:

**Date Installed:** \_\_\_\_\_

**Location/Site Installed:** \_\_\_\_\_

**Please file these instructions in a safe place for future access and refer to them as needed.**

**AN OPENING NOTE ABOUT THE L-RING GASKET SEALS:** 99% of the L-ring (cross sectional shape) gaskets supplied are either food grade Ethylene Propylene (EPDM) or food grade nitrile (Buna-N). We also have available Viton L-ring gaskets. EPDM handles higher temperatures and provides longer life in applications where oils are not involved. If oils are in your product, Buna-N is probably the better choice.

#### **RARE EARTH MAGNETS ARE POWERFUL**

#### **THESE WARNINGS ARE FOR YOUR SAFETY**

**THE MAGNETIC ELEMENT CONTAINS VERY POWERFUL RARE EARTH MAGNETS. KEEP IT AT LEAST 24" AWAY FROM ALL OTHER MAGNETIC ITEMS, OTHERWISE THEY MAY MAGNETICALLY JUMP TOGETHER CAUSING SERIOUS INJURY TO FINGERS AND OTHER OBJECTS CAUGHT BETWEEN THEM. DO NOT PLACE THE MAGNETIC ELEMENT ON OR NEAR STEEL-TOPPED BENCHES OR TABLES, NEAR OTHER MAGNETS, STEEL TOOLS, IRON OR STEEL ITEMS, COMPUTER DISKS, COMPUTER SCREENS, CREDIT CARD MAGNETIC STRIPS, MECHANICAL WATCHES AND OTHER SENSITIVE EQUIPMENT. PEOPLE WITH PACEMAKERS SHOULD NOT BE NEAR THE MAGNETIC ELEMENT. DO NOT DROP OR HAMMER ON THE MAGNETIC ELEMENT. DO NOT WELD ON THE MAGNETIC ELEMENT. CALL US IF YOU HAVE ANY QUESTIONS.**

#### **MAGTRAP HAZARDS ARE IN EIGHT CATEGORIES**

- 1) **MAGNETIC PINCHING OR TRAPPING** can occur when the powerful rare earth magnets overpower an operator. The result can be pinching, trapping or locking the operator's fingers, hands or other body parts. Do not allow the magnetic element within 24" of anything magnetic, **especially other magnets**.
- 2) **MAGNETIC DESTRUCTION** whereby video screens can be destroyed, credit card magnetic strips and computer disks erased, mechanical watches magnetized (ruined), and other sensitive equipment (PACEMAKERS) made inoperable by being exposed to a powerful magnetic field. Do not allow the magnetic element close to any such sensitive equipment.
- 3) **LIQUID AND CHEMICAL BURN HAZARDS** are present depending upon the processing temperature and the products being processed or being used for cleaning. Hot product can spill on an operator when the MAGTRAP is taken apart for cleaning. Chemical burns can occur if offending chemicals are present. Similarly, offensive fumes could overpower an operator. Such accidents can also occur if gaskets are not properly seated, defective gaskets are used, the band retaining clamp is not properly seated, tightened and locked, or if the clamp is accidentally opened while processing.
- 4) **SLIPPING AND FALLING HAZARDS** can be present if liquids are on the floor. Liquids can spill from the MAGTRAP when it is opened. Spilled liquids can make the floor slippery and cause people to fall. Anticipate this problem and prevent spills and drips from reaching the floor by using containers to catch the liquids. Personnel should wear non-skid footwear and non-skid mats should be properly located.
- 5) **TOTAL FLOW BLOCKAGE OR REDUCED FLOW** due to trash build-up inside the MAGTRAP. Clean the MAGTRAP on a regular basis to prevent the accumulation of unwanted debris.



## CESCO Model 135 MAGTRAP - Installation and Operating Instructions (Continued)

- 6) **GASKET FAILURE** can cause product to leak from the system. Inspect the gaskets for cuts or abrasions that can cause leaks. Test gaskets by flexing them to see that they are flexible and have not hardened. Be sure the gaskets fit smoothly in place and are not wrinkled or distorted.
- 7) **CLAMP FAILURE** can endanger personnel and damage equipment. Insure your MAGTRAP parts fit together smoothly. The clamps must be properly seated in both grooves and the clamp's T-bolt must fully engage the pivoting yoke, this **must be parallel with the body**. The safety latch must engage the overthrow lever to assure it's locked in the closed position.
- 8) **OVERPRESSURE IN THE LINE** can create leaks at the gaskets. Extreme overpressures can break clamps and send the magnet or lid flying. When a MAGTRAP is installed **after** a pump, never pressurize the line with all downstream valves closed.

### TIPS FOR BEST MAGTRAP LOCATION AND SAFETY

Model 135 MAGTRAPs are designed to work at pressures not to exceed 200 pounds per square inch (13.8 bar) and temperatures not to exceed 230°F. (110°C.). Should you require higher temperatures, call us and we can supply 482 F. (250 °C.) magnets. MAGTRAPs have two primary purposes; to protect vital plant equipment (pumps, dicers, mills, screens, etc.) from metal damage and to protect product purity. If equipment protection is paramount, install the MAGTRAP in-line ahead of the item to be protected. If product purity is paramount, install the MAGTRAP in front of the filler. If an electronic metal detector is in-line before the filler, place the MAGTRAP 18" or more ahead of the detector. MAGTRAPs will reduce rejects and capture particles smaller than the metal detector can sense. Install the MAGTRAP as far ahead of a pump's intake as possible, this allows product to minimize line pulsation by acting as a buffer. It is not good practice to attach MAGTRAPs to pump outlets. Some types of pumps generate significant pressure pulses that can destroy downstream MAGTRAPs. In these instances, install a pressure snubber to minimize the pressure surges. Many positive displacement pumps generate instantaneous line pressures sufficient to rupture lines and line components, it takes only an instant of excessive pressure to destroy a line. There can be a significant hazard to personnel and property if pumps are energized with all downstream valves closed. We recommend installing an appropriate pressure relief valve to eliminate pressure problems.

### THINGS TO THINK ABOUT BEFORE INSTALLING YOUR MAGTRAP

MAGTRAPs may be mounted in any position without affecting their magnetic separation abilities. For Clean-In-Place systems installing the MAGTRAP in vertical lines allows total body drainage (no sump area), a waist/chest high location is ideal. In vertical line installations the magnet openings will always be located side-by-side. When MAGTRAPs are mounted in **horizontal or sloped lines** a sump area will always be present, be prepared for product spillage when opening a MAGTRAP for cleaning. MAGTRAP bodies can be secured at any angle around a pipe's centerline that will allow best access for disassembly and cleaning. Adjacent plant features, accessibility, and the type of products being processed may dictate body orientation. Generally, side-by-side openings are easier to service but over-and-under mounting provides a bottom sump area better suited to trapping non-magnetic trash (rocks, stainless bolts, etc.) **The MAGTRAP body is non-directional** and cannot be installed backwards, unless non-similar line connections were ordered. To make body installation easier, you can lighten the body's weight by removing the magnetic element and the blank closure plate. Please read the section "CLEANING THE MAGTRAP", paragraph 2. Remember **do not place the magnetic element onto a steel top table**. Before reassembling the magnetic element or the blank closure plate, read the section "REASSEMBLING THE MAGTRAP".

### WHEN TO CLEAN THE MAGTRAP

Downtime can be minimized if cleaning occurs at planned shutdowns or at product/batch changeover times. Cleaning frequency will also depend upon the amount of trash in the line and the production schedule. Frequent cleaning provides quicker identification of contaminants and thus faster ability to prevent their entry into the system. Captured trash, if left too long between cleanings, can leave rust stains on the MAGTRAP's interior and on the magnetic element. The stains can be removed with scouring powder.

### CLEANING THE MAGTRAP

- 1) Depressurize the line and lock out the pump before opening the MAGTRAP.
- 2) Have a flat bladed screwdriver at hand before opening the MAGTRAP. Be prepared for product spillage and release of residual line pressure when opening the MAGTRAP. Assume that the blank closure plate will be removed first, it does not have a CAUTION label on it. Firmly grasp the blank closure plate's handle with one hand while the other hand presses and releases the band clamp's safety latch. Lift the clamp's overthrow lever to release the blank closure plate. Depending upon the MAGTRAP's orientation, be prepared to support the weight of the released cap. Rock and twist the handle to see if the plate can be separated from the body. If it is stuck to the body, carefully wedge the tip of the flat-bladed screwdriver into the crack between the endcap and body, and twist. Be careful not to damage the L-ring gasket. Remove the blank closure plate from the body. Carefully remove the L-ring gasket from the blank closure plate or the body and set it aside for cleaning. Remove the magnetic element from the body by repeating step 2) above. The magnetic element has a yellow CAUTION label affixed to it. **Be careful not to put the magnetic element on a steel tabletop or pass it near any other magnet.**
- 3) Check the magnetic element for trash by gently washing away all product from the magnetic fingers to expose any collected debris. Have a piece of white plastic or paper handy and proceed to transfer the collected trash from the magnetic fingers to the white paper or plastic for lab analysis. See the ANALYSIS OF THE CAPTURED TRASH paragraph on the next page.

## CESCO Model 135 MAGTRAP - Installation and Operating Instructions (Continued)

- 4) Some suggestions for removing captured contaminants from the magnetic tubes are:
  - Use water, low pressure compressed air or your fingers to move all trash to one side of the magnetic tubes.
  - Depending upon the size and shape of the trash, use a gloved hand to pull the trash to the tip of each tube.
  - Firmly grip the shaft of a flat bladed screwdriver so about ½" of the blade protrudes between the thumb and forefinger.
  - With a rocking motion, carefully touch each pile of trash with the blade tip. Trash will jump to the blade. Transfer the trash to the paper or plastic.
  - **Finish with sticky tape. It will remove the very finest particles.**
- 5) After the trash has been removed, wash the magnetic tubes, the blank endcap, the gasket seals, the clamps and the inside of the MAGTRAP body before reassembling the unit. Inspect the L-ring gaskets for surface damage. Bend the gaskets to check their flexibility, but do not stretch them. Replace any gasket that has cuts, abrasions or has hardened and is not capable of providing a proper seal. L-ring diameters are made slightly smaller than the parts they fit. Good L-rings fit smoothly and stay in place when assembled.
- 6) When cleaning the inside of the MAGTRAP body, inspect both gasket seal areas for cleanliness to assure that nothing is present to prevent achieving a good seal. **Captured ferrous items will leave rust stains on the MAGTRAP's interior surfaces and on the magnetic elements. These stains can be removed with scouring powder.**

### ANALYSIS OF CAPTURED TRASH

Captured debris should be examined with a 10–15 power magnifier to properly identify the offending captured particles. The naked eye cannot compete with a good magnifying glass when trying to analyze the source of the captured trash. Once identified, take the necessary steps to prevent future entry into the system. Iron particles appear black or brown, stainless particles are shiny.

### REASSEMBLING THE MAGTRAP

**SPECIAL NOTE: L-ring material expands when warm and may not fit snugly. Either allow the L-rings to cool and shrink to their proper size or use other cool L-rings and set the cleaned, warm L-rings aside for future use.**

- 1) Place an L-ring gasket onto the blank closure plate's perimeter groove and smooth it into place.
- 2) Place an opened clamp loosely on the body groove where the blank endcap will be attached.
- 3) Insert the blank closure plate into the MAGTRAP body with a twisting motion and align the handle parallel with the product flow.
- 4) Move the clamp into the mating grooves on the body and blank closure plate. Tighten the clamp's overthrow lever and check the safety latch fully engages the overthrow lever.
- 5) Check the clamp's T-bolt where it captures the pivoting yoke to be assured that it is parallel with, and not perpendicular to, the MAGTRAP body. If the safety latch is not securely locked, release all clamp pressure and simply bend the safety latch by hand until it fully engages the overthrow lever.
- 6) Repeat the five steps above to assemble the magnetic element to the body and **check that the arrow stamped into the top of the Magnetic Element is pointing in the direction of flow.**

**REMEMBER - THE MAGNETIC ELEMENT IS DIRECTIONAL**

**- THE ARROWS MUST POINT IN THE DIRECTION OF PRODUCT FLOW.**

### CORRECT BAND CLAMP TENSION

There are two body band clamps on the MAGTRAP. One attaches the magnetic element to the body, the other attaches the base. Both clamps have identical quick release overthrow levers that are retained by safety latches. To achieve proper band clamp tension, adjust the Nylock nut on the end of the clamp's T-bolt. This adjustment should be done with the system at pressure. **The nut should be tightened only enough to prevent product leakage.** We have found that tightening the nut applies pressure to one side of the clamp without applying pressure to the other side. **To achieve even clamp pressure with an over-throw lever clamp, after the nut is tightened to a point where it properly seals the unit and product does not leak, the clamp should be released (opened), and reset.** So turn off the pump, removing the pressure, then open and reset the clamp and turn the pump on again. Over-tightening the nut will crush the L-ring gasket and bend the T-bolt's wrapper and the pivoting yoke. Once a band clamp's tension is properly set, the clamp will repeat the same tension time-after-time. A clamp will stretch if improperly latched. **Be sure that the pivoting yoke correctly captures the clamp's T-bolt. The T-bolt should lie parallel with the MAGTRAP body, not perpendicular to it. This simple check will prevent the most common error responsible for product leakage, clamp failure and possible personnel injury. Clamp failures are dangerous and safety training here is a must.**

### REPLACEMENT PARTS

Clamp usage is directly proportional to careless handling and line pressures. L-ring gasket life is affected by many factors. L-rings should be replaced if they are stretched, scratched, cut, stiff, brittle or have assumed an improper permanent set by incorrect seating. Spare parts should be stocked for emergency use.

We recommend that the following spare parts be kept in stock for emergencies:

- 1 - Clamp Assembly
- 4 - L-ring Gaskets (Food Grade Buna-N, EPDM or Viton)

CESCO tries to maintain spare parts in stock at all times for immediate delivery. When ordering parts, please provide the Magtrap's **Model Number** ( 115, 120, 125, 130, 135, 135EC, 160, 170) **and line size OR the serial number** (stamped on the body and the magnetic element). This information should be listed on Page 1.


(CONTINUED ON REVERSE SIDE)



# - SPECIFICATIONS -

## CESCO Model 135 MAGTRAP

### REPLACEMENT PART NUMBERS

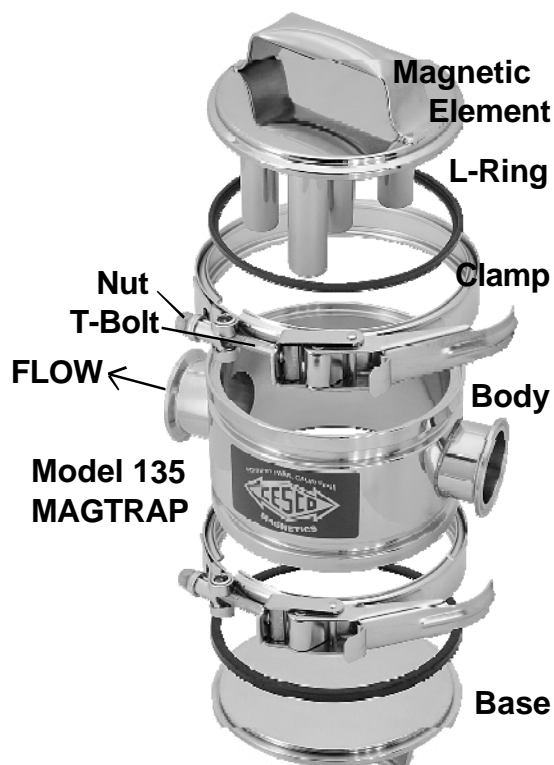

LINE SIZE	1" - 2"	2.5" - 3"	4"
<b>MAGNET</b>	MF650-400	MF850-518	MF850-675
Hi-Temp	MF650-400HT	MF850-518HT	MF850-675HT
<b>CLAMP</b>	CL650L	CL850L	CL850L
T-bolt	TB300-100	TB300-100	TB300-100
Nut	TN312-024	TN312-024	TN312-024
<b>BODY</b>	BD650-400	BD850-518	BD850-675
<b>BASE</b>	BT650	BT850	BT850
<b>L-RINGS</b>	LR650-?	LR850-?	LR850-?

? = MATERIAL TYPE (B, E, V, EMD or VMD)

B = FDA BUNA-N E = FDA EPDM V = FDA VITON

EMD = X-Ray/Metal Detectable VMD = X-Ray/Metal Detectable

**HOW TO SIZE A MAGTRAP:** MAGTRAPs are most effective at slower rates of flow. It is easier to extract metal trash through low viscosity products than through higher viscosity products. With this in mind, select your product's viscosity Class from the tables below (Example: Water = Class 1, Molasses = Class 4), then move to **TABLE B**. From **Table B**, match your line's viscosity class and maximum pumping capacity against the unit's maximum flow ratings, then select the appropriate line size. Line reducers (expanders) may be used. When operating at or near a MAGTRAP's upper flow capacity, move up one line size to assure meeting future increased pumping needs.

Select a class that best matches the most viscous product to be pumped. Remember that temperature and percent of liquid can greatly affects a product's viscosity class. If needed, water jackets can be added to heat or cool the product.

#### **CLASS 1 (1 - 1000 centipoise)**

Beverages, clear broths, soups, juices, warm jellies, light sauces, thin salad dressings.

#### **CLASS 2 (1000 - 5000 centipoise)**

Applesauce, pulped fruits and vegetables, syrups, custards, baby foods, cranberries, hot preserves.

#### **CLASS 3 (5000 - 50,000 centipoise)**

Chopped foods, creamed cheese, pumpkin filling, frozen slush, heavy sauces, batters, heavy purees.

#### **CLASS 4 (50,000+ centipoise)**

Cooled products, pet foods, nut butters, minced meat, thick batters and slow flowing products.

**TABLE B**  
**MODEL 135**

LINE SIZE	MAXIMUM FLOW - GALLONS / MINUTE				MAXIMUM PRESSURE
	CLASS 1	CLASS 2	CLASS 3	CLASS 4	
1.5" - 2"	95	67	38	19	200 PSI
2.5" - 3"	187	131	75	37	180 PSI
4"	252	176	101	50	180 PSI

CESCO attempts to provide the best equipment and service attainable. We welcome your questions, suggestions, and comments. Should you have a problem, please provide the unit's serial number when you call. We always appreciate hearing about your experiences with our equipment as it adds to our knowledge and enables us to improve the best features and eliminate problems. **We thank you** for choosing CESCO.



Distributed by:

**NELSON JAMESON**  
INC.

800-826-8302 nelsonjameson.com