


COMMENT LIRE UN iBEE ?

POUR LIRE UN iBEE, UTILISEZ LA PINCE DE LECTURE :



1. Assurez-vous de brancher l'iBee **sur la bonne face**, comme sur l'image ci-dessous :

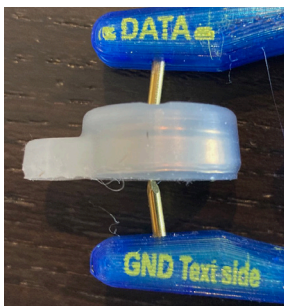


2. **Appuyez fortement** sur la pince pour assurer un contact correct


3. Il peut être nécessaire de **tourner en même temps doucement l'iBee** pour faciliter le contact

COMMENT LIRE UN iBEE ?

POUR LIRE UN iBEE, UTILISEZ LA PINCE DE LECTURE :

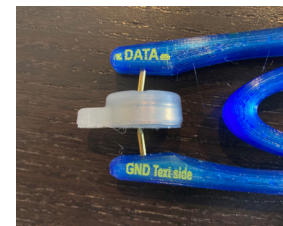

1. Assurez-vous de brancher l'iBee **sur la bonne face**, comme sur l'image ci-dessous :

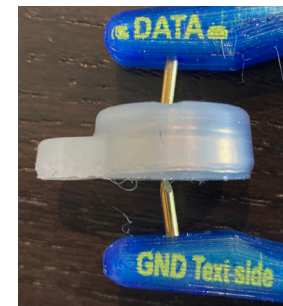

2. **Appuyez fortement** sur la pince pour assurer un contact correct


3. Il peut être nécessaire de **tourner en même temps doucement l'iBee** pour faciliter le contact

HOW TO READ AN iBEE ?

TO READ AN IBEE, YOU NEED TO USE THE CONNECTION CLAMP :



1. Make sure you place the iBee **on the proper side** as per image below :

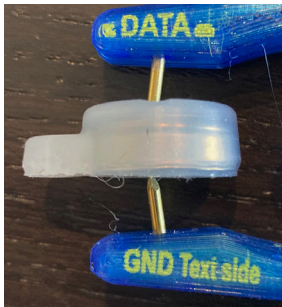

2. **Press hard** on the clamp to ensure a good contact


3. You might **gently simultaneity twist the iBee** to facilitate contact

HOW TO READ AN iBEE ?

TO READ AN IBEE, YOU NEED TO USE THE CONNECTION CLAMP :



1. Make sure you place the iBee **on the proper side** as per image below :

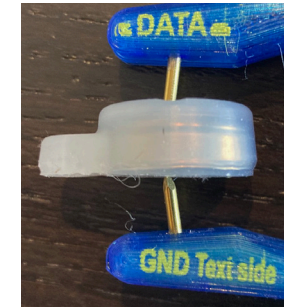

2. **Press hard** on the clamp to ensure a good contact

3. You might **gently simultaneity twist the iBee** to facilitate contact