

Internal spring-loaded valves only allow product to flow when mated with the appropriate Safe-T-Feed[®] tubing adapter.

Safe-T-Feed[®] is offered in two styles:

Orange - low flow - 1/4" tubing. Up to 1 qt/min.

White/Black - high flow - 3/8" tubing. Up to 3 gal/min.


As part of our continued dedication to customer safety,

Enviro Tech is proud to offer the Safe-T-Feed[®] system as an option on our larger pack sizes of peracetic acid products such as Perasan[®] A, Perasan[®] MP-2, and BioSide[®] HS-15%.

The Safe-T-Feed[®] system keeps the concentrated peracetic acid product **entirely contained** and away from operator contact or contamination throughout the entire process. No bung removal is required to insert dip tubes, and no open drums means no accidental contamination.

Available on both 55 gallon drums and returnable IBC totes, the product arrives to the customer with the Safe-T-Feed[®] vented bung, dip tube, and shipping cap installed. To attach to the product delivery system in the plant, simply unscrew the protective shipping cap and install the corresponding Safe-T-Feed[®] tubing adapter. Upon attaching the adapter to the Safe-T-Feed[®] bung, the internal valve opens and product can flow to the pump; when the adapter is removed, the internal valve **automatically closes** to prevent drips and spills.

Orders of peracetic acid in drums or returnable IBC totes with the Safe-T-Feed[®] option requested will come with the appropriate bung and dip tube pre-installed. Tubing adapters need to be purchased separately to mate with the bungs, but are reusable between drums or totes. Additionally, standalone Safe-T-Feed[®] bung systems are available to retrofit drums containing standard butress bungs. Please note, however, that the returnable totes require different bungs which are not sold separately. Please reference the following part numbers when ordering.
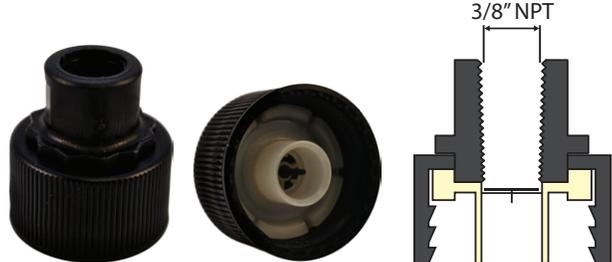
| | Part # | Description | Price |
|--|--------|---|---------|
|  | P-5072 | STD-Flo Orange Cap, Female, 90°, 1/4". Connects to both drum and tote Safe-T-Feed [®] bungs. For flowrates up to 1 qt/min. | \$10 |
|  | P-5073 | MED-Flo Cap Adapter, Female, 3/8" Connects to both drum and tote Safe-T-Feed [®] bungs. For flowrates up to 3 gals/min. <i>NOTE: An additional part will be required to connect this to tubing.</i> | \$18.13 |
|  | P-5061 | STD-Flo System for drums (orange). Contains 1 bung, 1 diptube, and 1 protective shipping cap. | \$10 |
|  | P-5060 | MED-Flo System for drums (white). Contains 1 bung, 1 diptube, and 1 protective shipping cap. | \$10 |

Drums with Safe-T-Feed[®] installed are clearly labeled for shipping.





Vented shipping cap protects Safe-T-Feed[®] internals.



Removal of shipping cap allows connection of tubing adapter.



Although the returnable IBC totes require a different bung, the Safe-T-Feed[®] tubing adapter interface is identical and allows complete interoperability.

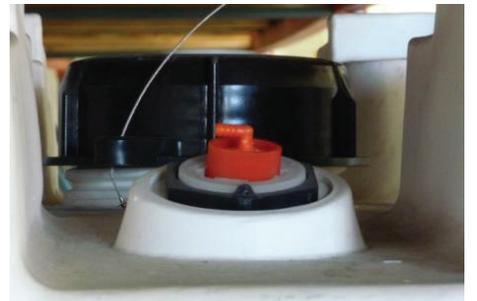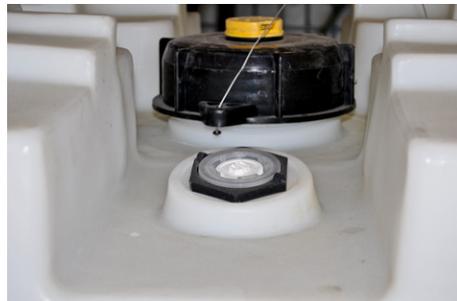

Distributed by:

NELSON JAMESON
INC.

800-826-8302 nelsonjameson.com

ENVIROTECH